
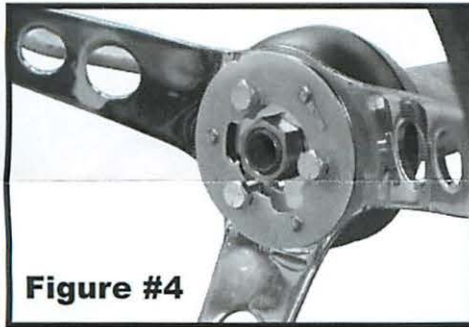
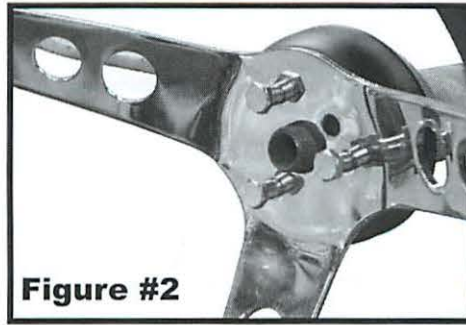


Installation Instruction for Adapter 79-4115-0 & 79-4117-0

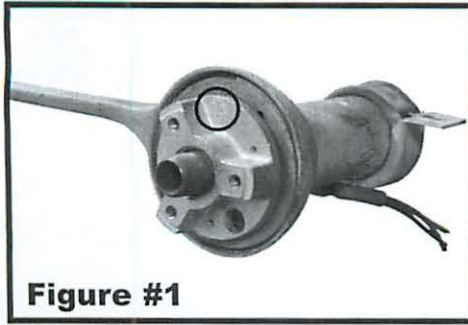

1. Mount your existing turn signal cancellation cam to the rear of the Hub supplied in this Kit. Attach by using your original screws (3) or the plastic ones provided in this kit. (Kit 79-4115-0 Only)
2. Position hub on splined steering shaft ensuring that the top of the Hub orientation is correct. (See Figure #1)
3. Position Post Cover and Wheel on the Hub using the 3 shouldered bolts provided. Do not tighten shoulder bolts at this time (See Figure #2)
4. Check Wheel for position and correct if necessary, Install the Wheel Retainer Nut provided in this Kit and tighten to *secure the wheel to the Hub*. (See Figure #3)
5. Remove the three shoulder bolts and reinstall them through the retainer contactor ring. Tighten Shoulder Bolts to 10-12 ft. lbs. (Do not over tighten) (See Figure #4)
6. The wire supplied in this Kit has two ends, a 'slip' connection and an 'eye' connection. Cut the wire and splice to the existing horn wire using the splice connector provided using the desired end to attach to the contactor ring.
7. Position the spring on top of the nut with the wire threaded through the coils of the spring
8. Place horn cap in place by aligning the 3 dimples on the Horn Button with the 3 reliefs cut in the fiber material of the Retainer Contactor Ring. Push gently on the Horn Button until the dimples pass the fiber ring. Twist the cap either to the Left or Right until tight. (See Figure #5)
9. Reconnect the Battery and Test Horn